





# Quick Start Card in.xm2™ North American version

## 1- Connect all outputs & keypads

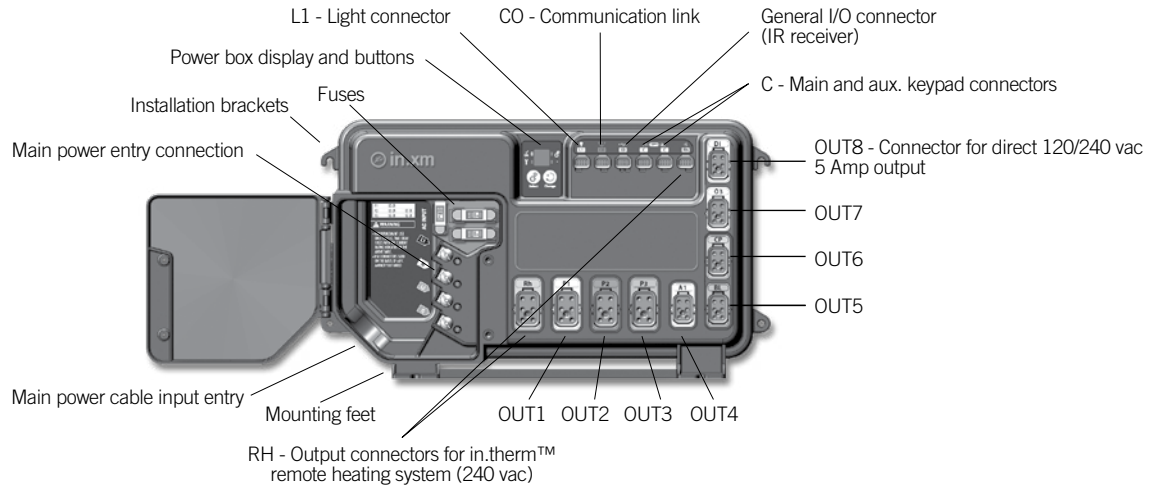


*Don't forget that the voltage is determined by the cable used (120 or 240V cable)!*

## 2- Connect the main power

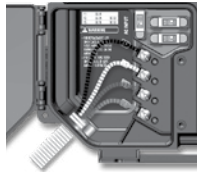

### For 240 VAC (4 wires)

Correct wiring of the electrical service box, GFCI, and pack terminal block is essential. Call an electrician if necessary.

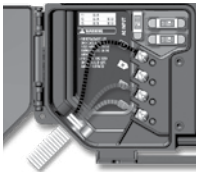

### For 240 VAC (\*3 wires)

\* If connected to a 3 wire system (without neutral), all 120 VAC components will not work.

## 3- Select spa configuration (see chart next page)

LL

First, the led display will show "LL" and "01" continuously.



Press **Change** button to choose the appropriate configuration for your spa.




Press **Select** button to confirm. (The pack will now reset and reboot)

**Note:** To re-enter the configuration selection menu the press **Select** button and hold for 5 seconds.

For more information, see our website: [www.geckoalliance.com](http://www.geckoalliance.com)

## 4- Select breaker current

Make sure all accessories are linked to the bonding connector and connected to pack. Make sure the spa pack door is closed. Turn on the breaker.

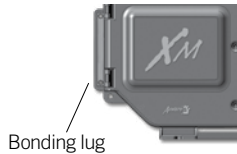

### Selecting breaker current (Br)



Press **Change** button to choose the breaker current value.



Press **Select** button to confirm. (The pack will now reset and reboot)

**Note:** Br values display by the pack correspond to 80% of the maximum amperage capacity of the GFCI.

GFCI	Br
60 Amp	48 Amp
50 Amp	40 Amp
40 Amp	32 Amp
25 Amp	20 Amp
20 Amp	16 Amp

For more information, see our website: [www.geckoalliance.com](http://www.geckoalliance.com)



## Configuration selection chart

Software #181, rev. 3.00

Config #.	Pump 1	Pump 2	Pump 3	Pump 4	Pump 5	BL	TV lifter	Sanitation	Circ. Pump	Heat with P1 or CP?	Filtration/Ozone with P1 or CP?
1	2sp	-	-	-	-	-	-	-	-	P1	P1
2	2sp	-	-	-	-	-	-	-	x	CP	CP
3	2sp	2sp	-	-	-	-	-	-	-	P1	P1
4	2sp	2sp	-	-	-	-	-	-	x	CP	CP
5	2sp	2sp	-	-	-	x	-	-	-	P1	P1
6	2sp	2sp	-	-	-	x	-	-	x	CP	CP
7	2sp	2sp	x	-	-	-	-	-	-	P1	P1
8	2sp	2sp	x	-	-	-	-	-	x	CP	CP
9	2sp	2sp	x	-	-	x	-	-	-	P1	P1
10	2sp	2sp	x	-	-	x	-	-	x	CP	CP
11	2sp	2sp	x	-	-	-	-	-	-	P1	P1
12	2sp	-	-	-	-	x	-	-	-	P1	P1
13	2sp	-	-	-	-	x	-	-	x	CP	CP
14	1sp	1sp	-	-	-	-	-	-	x	CP	CP
15	1sp	1sp	-	-	-	x	-	-	x	CP	CP
16	1sp	2sp	x	-	-	-	-	-	x	CP	CP
17	1sp	2sp	x	-	-	x	-	-	x	CP	CP
18	2sp	1sp	-	-	-	-	-	-	-	P1	P1
19	2sp	1sp	-	-	-	x	-	-	-	P1	P1
20	2sp	2sp	x	-	-	-	-	-	-	P1	P1
21	2sp	1sp	x	-	-	x	-	-	-	P1	P1
22	2sp	1sp	-	-	-	-	-	-	x	CP	CP
23	2sp	1sp	-	-	-	x	-	-	x	CP	CP
24	2sp	2sp	x	-	-	-	-	-	x	CP	CP
25	2sp	2sp	x	-	-	x	-	-	x	CP	CP
26	1sp	2sp	x	-	-	-	-	-	x	CP	CP
27	1sp	2sp	x	x	-	-	-	-	x	CP	CP
28	1sp	2sp	x	x	x	-	-	-	x	CP	CP
29	VSP	2sp	VSP	-	-	-	x	x	-	P1	P1
30	VSP	2sp	-	-	-	-	x	x	-	P1	P1
31	VSP	-	VSP	-	-	-	x	x	-	P1	P1

### Glossary

P1	Pump 1
CP	Circulation Pump
VSP	VSP Pump
1sp	1 speed pump
2sp	2 speeds pump
X	Installed

**Note:** This low level configuration table is valid for the software #181 revision 3. This information is displayed on top side keypad at spa pack power-up. Software number is displayed first (ex: **50FE**), **5P**, **181**), followed by revision (ex: **3.00**). For in.k600™ (menu-driven interface), you will find the information in Info sub-menu located in Options menu.

For complete TechBook or more information, see our website: [www.geckoalliance.com](http://www.geckoalliance.com)

